


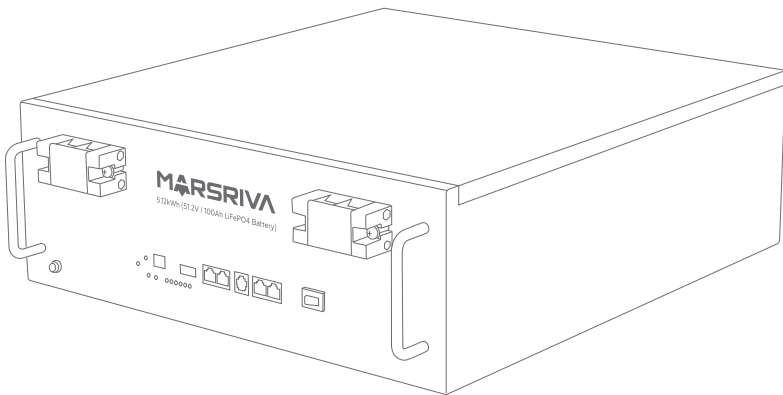

USER MANUAL

Rack Mounted LiFePO4 Battery

MR-LFP5.12-LRT



About User Manual

Appreciate for choosing household energy storage system developed and produced by MARSRIVA. We sincerely believe that our products can satisfy your requirements as well as looking forward to your feedback on the performance of the product during use, so that we can further improve the quality of the product.

1. Description

- This User Manual is applicable to the installation and use of the product of low voltage series-rack mounted type with communication.
- Please read and understand all the contents of this Manual carefully before installation and operation of the product. Any loss caused by ignoring the contents of this Manual may void the warranty of the product.
- The drawings provided in this Manual are for explanation of the relevant concepts of the product, including product information, installation guide, instructions for use, safety information, frequently asked questions and maintenance etc.
- This Manual and other product-related documents are an integral part of the product and need to be properly kept for the on-site installation personnel and relevant technical personnel to look up further.
- The content of this Manual will be updated and amended continuously. Users will refer to the physical products purchased. For more information, please obtain the latest user manual through sales channels.

2. Introduction

This Manual contains the product information, installation guide, instructions for use, safety information, frequently asked questions and maintenance, etc. of the product.

Product Features

The product has the features as below:

- Rack mounted type with communication is a kind of low voltage lithium ion battery energy storage system for household application.
- Integrated with high-capacity and high-safety lithium iron phosphate cell.
- Built-in BMS to monitor and collect the voltage and temperature in the module in real time, realizing the intelligent temperature control at the electrical core level and the intelligent balance function of the battery.
- Improving cycle life, inside the battery pack, which is filled with shock-proof structure inside the cold-rolled sheet metal shell to meet the requirements of high safety and high reliability.
- The pack is designed with high stability and high disturbance resistance to ensure the safe and reliable operation of the battery system.

Safety


 










Before formally installing and operating this product, please read this part carefully and strictly implement its contents. During installation and use of this product, in order to prevent the personal injury and property loss and ensure the long-term usage of the product, the installation personnel and user shall abide by the articles and regulations of the relevant local laws and comply with all safety provisions and usage specifications of this Manual.

1. Symbols

Danger: Risk of electric shock!
Danger of high voltages: Danger to life due to high voltages in the battery
It indicates that the PE is protected and must be firmly grounded to ensure the safety of operators

2. Installation Preparation

Tools as below are prepared before installation:

Items	Tools List		
Regular Tools	Multi-Meter 	Protective Gloves 	Insulated Shoes 
	ESD Wrist Strap 	Safety Goggles 	Anti-Static Strap 
Installation Tools	Electric Screwdriver 	Socket Wrench 	Wire Clamp 
	Phillips Screwdriver 	Chum Drill 	Hammer 

3. Nameplate

- Nameplate contains important information for the safe operation of the product, it is strictly forbidden to tear or damage!
- Nameplate contains important parameter information related to the product, it is strictly forbidden to tear or damage!

4. Safety Requirements for installation

- The safety protective equipment used in the process of installation shall meet the regulations on use of protective equipment.
- Any unclear safety symbols and warning messages on the product shall be replaced immediately.
- The transportation, installation and commissioning of the product must be carried out under the specified conditions.
- The installation and commissioning personnel of the product shall obtain the local electrician qualification.

- The installation and commissioning personnel of the product shall receive the corresponding training and obtain the qualification for installation and commissioning of the product.
- The installation and commissioning personnel of the product shall have the ability to evaluate the potential risks.
- Before commencement of installation, the installation personnel shall identify all safety risks at the site and implement the necessary safety risk controls.
- Please read and understand the safety information in this Manual carefully before commencing the installation.

5. Safety Requirements for Use

- Do not touch the battery module with the wet hands, in order to avoid the electric shock.
- Do not squeeze, impact or puncture the battery, in order to avoid the unnecessary damage and loss.
- Store and use the battery according to the instructions in this Manual, and comply with the relevant local laws and regulations and relevant safety standards.
- Before installation, replacement, repair and maintenance, remove all metal objects that may cause a short circuit.
- This product shall be repaired, replaced and maintained by the authorized personnel with electrician qualification.
- It's forbidden to reverse the polarity of the battery.
- The electrolyte of the battery will harm the skin and eyes; do not damage or disassemble the battery.
- Disconnect the battery with the grid/load before installation and maintenance, and then disconnect the battery supply.
- In the process of transporting, handling and storing the product, do not stack the unpacked products, in order to avoid the irreversible damage.
- The packaged battery modules shall not be connected in parallel and in series in excess of the specified quantity

6. Personnel qualification

The installer of the product shall have the local electrician qualification, have received the safety and technical raining, obtain the qualification authorized for the installation of the product, possess the experience in installation and use of electrical equipment and the following capabilities, including but not limited to:

- Setting, activation, shutdown, grounding, short circuit and repair of electrical equipment.
- Standard maintenance and use of protective devices for electrical equipment.
- Provision of emergency rescue for the injured.
- Compliance with local laws, regulations, standards and instructions.

7. Power-On Measurement

After the product is installed, there is high voltage. Accidental touching of the positive and negative poles may cause electric shock.

Therefore, when powering on for measurement, please pay attention to:

- Be prepared for insulation protection (such as wearing insulating gloves, etc.).
- Must be accompanied by someone to ensure personal safety

8. Measurement Instruments

When performing electrical connections, test runs etc.in order to ensure that the electrical parameters meet the requirements, it is necessary to use relevant electrical measurement equipment, such as multi-meters, power meters, etc. Please perform as below:

Use measuring equipment with appropriate range and in line with on-site working conditions.

- Ensure that the electrical connections of the instrument are correct and standardized to avoid dangers such as arcing.

9. Maintenance & Repair


After the battery and inverter are disconnected, be sure to confirm that they are disconnected before performing maintenance or inspection on battery, please perform as below:

- Ensure that the battery cannot be accidentally re-energized.
- Use a multi-meter to make sure the battery is fully powered down.
- Parts near the operating part, use insulating materials to insulate and cover them , and conduct necessary grounding.
- It is strictly prohibited to perform maintenance or inspection operations while the equipment is powered on! When performing maintenance or inspection on the battery, at least two personnel must be on site. Maintenance operations cannot be performed until the device has been safely powered off, charged or discharged.

Product Introduction

1. Connection Structure



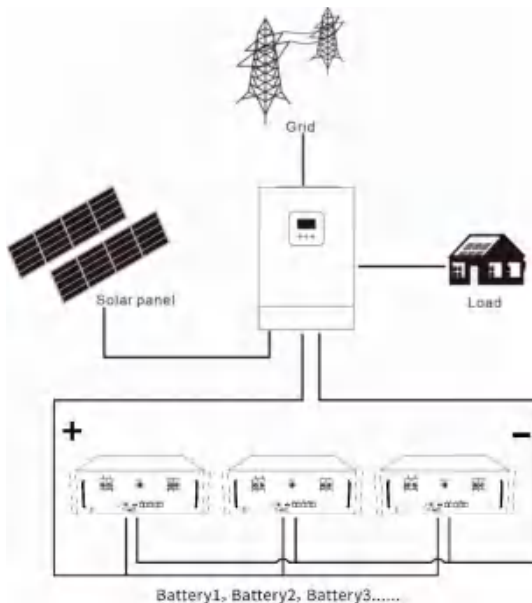



The connection diagram of Lifepo4 Battery Energy Storage System is shown in Figure 1 below:



2. Product Dimension


No.	Specifiction	Dimension (L*W*D) / mm
1	48V / 106Ah LiFePO4 Battery	566 × 362 × 135
2	51.2V / 106Ah LiFePO4 Battery	566 × 362 × 135
3	48V / 100Ah LiFePO4 Battery	483 × 480 × 135
4	48V / 200Ah LiFePO4 Battery	483 × 780 × 135
5	51.2V / 100Ah LiFePO4 Battery	483 × 442 × 155

2. Parts List


No.	Image	Items	Qty (pcs)
1		Rack Mounted LiFePO4 Battery	1
2		Red-Positive Power Cable	1
3		Black-negative Power Cable	1
4		Category 6 Communication Cable	1
5		User Manul	1
6		Warranty Certificate	1

Product Function

1. Product Structure

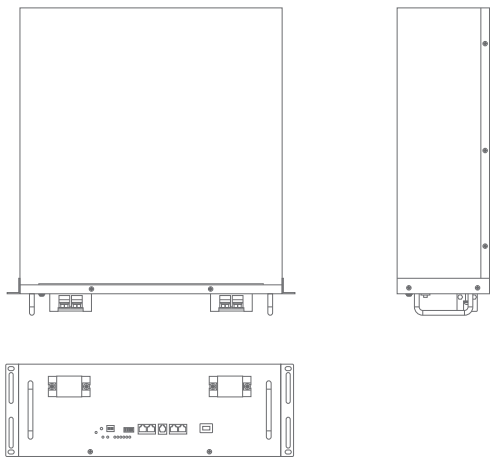

2. Product Control Panel Introduction

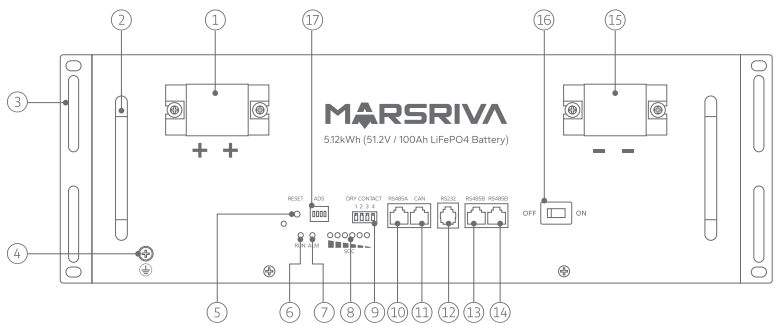

No.	Item	Function	Remark
①	Positive Terminal (+)	Battery external positive output port	
②	Case Handle	Easy to carry, move and install	
③	Hanging Ears	For mounted and fixed	
④	GND Label	Battery grounding	
⑤	RESET Button	Battery Reset	When the battery fails, it can be gently touched 2-4s and released, and the BMS can reset by factory program

No.	Item	Function	Remark
⑥	RUN Lighting	LED indication(green light) during normal operation	Always on when product is running
⑦	ALM Lighting	Alarm indication, alarm indication when the system is abnormal	
⑧	SOC Display Lighting	Battery capacity display	
⑨	Dry Contact	Signal output of battery status	Dry contact 1-PIN1 to PIN2: open normally and close during fault protection. Dry contact 2-PIN3 to PIN4: On normally. The low battery alarm is closed.
⑩	RS485A	Communication port	Connected with 485 port of the inverter
⑪	CAN	Communication port	Connected with CAN port of the inverter
⑫	RS232	1. Monitor battery and parameter changes 2. Upgrade the software	
⑬⑭	RS485B	Communication port	Connected with 485 port of the inverter
⑮	Negative Terminal (—)	Battery external negative output port	
⑯	ON/OFF Button	Switch button for BMS circuit	
⑰	DIP Switch (ADS)	Define Battery Communication Code	

Installation

1. Tools Preparation

Tools prepared: Electric screwdriver, multi-meter, insulating gloves, battery rack, network cable, power cables

2. Safety Regulations

The installation, operation and maintenance of LiFePO4 Battery Energy Storage System should only be carried out by trained and qualified professionals. Before installation and use, please read the safety precautions and related operating procedures of this product carefully. The installation process must strictly abide by the following safety regulations and local safety regulations, otherwise it may cause personal injury or product damage.

- Please ensure that the inverter connected to the battery is a qualified power system;
- When installing the battery, please ensure that the power system is turned off and the battery pack is turned off;
- All power-saving cables must have corresponding insulation measures, and it is strictly forbidden to expose the power cord;
- Ensure that the battery and the power system are reliably grounded during installation.

3. Installation Notes

- When begin to install the battery system, you should pay attention to the following matters.
- Installation space and load bearing. Make sure that there are sufficient fixed components to install the battery system, and to ensure that the battery mounting bracket or the cabinet be strong enough to bear the weight.
- Cable specifications. To ensure that the use of the connection of the power supply line can meet the maximum current requirements of equipment operation.
- Project layout. Ensure the whole construction process of power equipment, batteries and other reasonable layout.
- Wiring layout. Ensure that the wiring reasonable, orderly; and consider the moisture-proof, corrosion prevention.
- The whole installation process should wear anti-static wristband.
- The installation site should be at least two or more peoples to operate.
- Please ensure the installation site safe before installation.

4. Installation Steps

Step 1: Take the batteries out of the packaging box, check whether the batteries are intact, and check whether the accessories are complete. For details, see the accessories list.

Step 2: Place the battery on the rack, and use a Philips screwdriver to secure the battery and the rack, as shown below.

Step 3: If multiple batteries are connected in parallel, manually press the weak current switch (ON/OFF) and use a multi-meter to check whether the voltages of each battery are consistent. If they are consistent, shut down the battery and connect the wiring harness.

The diagram is as follows (three batteries in parallel are used as an example).

Step 4: Connect the positive terminal (+) of the battery with a power cable, and then connect the negative terminal (-) of the battery with a power cable.

Step 5: Connect the RS485 communication port of the adjacent battery with the network cable (RS485 battery parallel port has the same function, do not distinguish).

Step 6: Connect all batteries to the ground line. There is a ground line mark at the lower left corner of the battery. Lock the ground terminal in this place.

Step 7: With the distribution of Class 6 network cable, one end is connected to the battery RS485A (or CAN) communication interface, the other end is connected to the inverter RS485(or CAN) interface (note that the definition of the inverter communication pin needs to correspond to the battery pin).

Step 8: Using a power cable to connect the negative electrode of the first battery (-) to the negative battery interface of the Inverter, and then use a power cable to connect the positive electrode of the last battery (+) to the positive battery interface of the inverter (the remaining two positive terminals after the battery is connected have the same function, do not distinguish; The 2 negative terminals are also).

Note:

- Define the battery at the top of the rack as the first and the battery at the bottom as the last.
- The battery that communicates with the inverter through a network cable is defined as the host. The DIP switch of the host is 1, and the battery must be dialed before it is started.
- Other battery DIP switches can be defined by referring to 2 to 15. Do not dial 1 repeatedly.

Debugging

1. Communication Pins Definition

- Definition of RS485A port (default baud rate 9600bps) for communication between the battery and the inverter.




PIN2/7 (white & orange)	485-A
PIN1/8 (orange)	485-B

Note:

The default RS485 protocol for the battery is set to Pylontech RS485 (V3.5) protocol. If compatibility with other inverters is needed, it is necessary to communicate through RS232 with the host computer to change the default protocol.

- Definition of CAN port (default baud rate is 500k) for communication between the battery and the inverter.

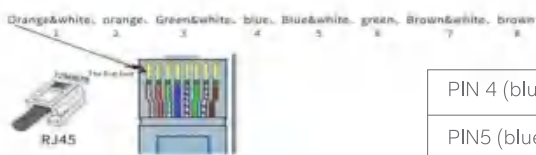

PIN 4 (blue)	CANH
PIN5 (blue & white)	CANL

Note:

The battery is factory-set with the default CAN protocol, defaulting to Pylontech CAN (V1.3) protocol. If compatibility with other inverters is required, it is necessary to communicate through RS232 with the upper computer to change the default protocol.

Tip:

For battery and inverter communication, choose either RS485 Or CAN.

2. Upper Computer Software Operation Guide

Modifying Battery Parameters and Selecting inverter Protocol via RS232 Upper Computer.

► **Tools**

- Computer
- USB to RS232 Cable
- Monitoring Software

► **Operating Steps**

- Connect the computer to the battery using a USB to RS232 cable. Plug the USB end into the computer's USB port and the other end into the battery's RS232 port.
- Download and unzip the software package on the computer.

- Open the extracted folder and select the application, as shown below.



- Double-click the above icon to enter the monitoring interface, as shown below:




- After entering the monitoring interface, click on the top right to open the serial port. Once communication with the battery is established, the left side will display real-time battery information, and the status bar in the lower right will turn green.




- After successful communication, enter the password "123456" in the lower right password status bar. Upon correct input, the status bar will turn green.



- Left-click on "System Config," as shown below:

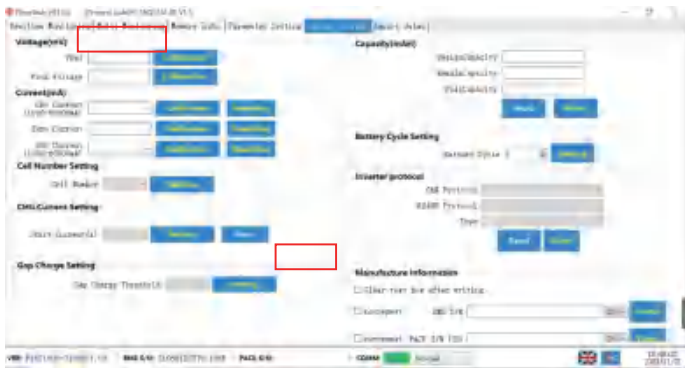



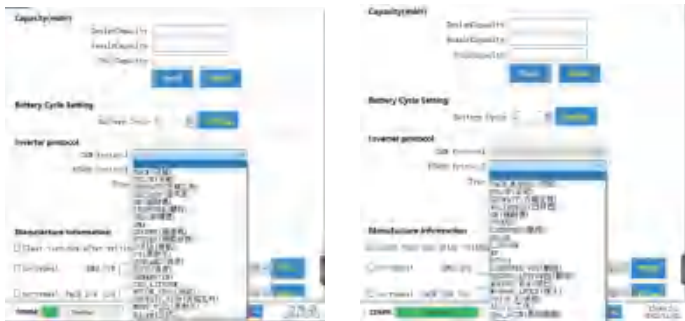













- In the middle-right part of the display interface (Inverter Protocol), click "Read" to check if the battery matches the actual inverter brand. If not, click on the CAN or 485 protocol and choose the protocol that matches the inverter, as shown below:




































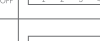


- After selecting the protocol, click the "Write" button. If the write fails, it indicates that the BMS does not include this inverter protocol, and a program upgrade is required. If the write is successful, click "Read" again to verify the selected protocol.

3. ADS DIP Switch Definitions

Address	DIP Switch Position				Illustration
	#1	#2	#3	#4	
0	OFF	OFF	OFF	OFF	
1	ON	OFF	OFF	OFF	
2	OFF	ON	OFF	OFF	
3	ON	ON	OFF	OFF	
4	OFF	OFF	ON	OFF	
5	ON	OFF	ON	OFF	
6	OFF	ON	ON	OFF	
7	ON	ON	ON	OFF	
8	OFF	OFF	OFF	ON	
9	ON	OFF	OFF	ON	
10	OFF	ON	OFF	ON	
11	ON	ON	OFF	ON	
12	OFF	OFF	ON	ON	
13	ON	OFF	ON	ON	
14	OFF	ON	ON	ON	
15	ON	ON	ON	ON	

4. Battery Parallel Connection DIP Switch Diagram

1 Battery	2 Battery	3 Battery	4 Battery	5 Battery	6 Battery	7 Battery	8 Battery
							
							
							
							
							
							
							
							

9 Battery	10 Battery	11 Battery	12 Battery	13 Battery	14 Battery	15 Battery	16 Battery

Faults & Troubleshooting

No.	Fault Symptoms	Cause Analysis	Solutions
1	No DC output	Battery voltage too low, protection activated	Startup after charging activation
2	Short power supply time	Insufficient battery capacity or failure to reach full charge	Confirm maintenance or replace battery
3	Battery cannot reach full charge	DC voltage output from power system lower than minimum charging voltage	Adjust device's DC output voltage to suitable charging voltage for battery
4	Unstable battery output voltage with significant fluctuations	Interference with management system operation	Restart the system
5	Temperature monitoring too low	Damage to temperature-sensing crystal head	Replace the collection line with a temperature-sensing crystal head
6	Unable to charge	Single cell protection activated upon full battery charge	Discharge Protection Removal
7	MOS temperature abnormal	MOS tube damaged	Replace BMS
8	Discharge over-current protection	Inverter power exceeds limit	Match the number of batteries according to the inverter power value

Compatible Inverter List

Brand	Logo	Type	Pins-Inverter	Pins-Battery	Remark
SMA		CAN	PIN 4: CANH PIN 5: CANL	PIN 4: CANH PIN 5: CANL	Battery change protocol
Victron		CAN	PIN 7: CANH PIN 8: CANL	PIN 4: CANH PIN 5: CANL	<ul style="list-style-type: none"> • Battery change protocol • Customized network cable
Growatt		RS485	PIN 7: RS485A PIN 8: RS485B	PIN 2/7: RS485A PIN 1/8: RS485B	<ul style="list-style-type: none"> • Default battery protocol matching • Inverter protocol setting option 2
Goodwe		CAN	PIN 4: CANH PIN 5: CANL	PIN 4: CANH PIN 5: CANL	Default battery protocol matching
Pylontech		RS485	PIN 7: RS485A PIN 8: RS485B	PIN 2/7: RS485A PIN 1/8: RS485B	Default battery protocol matching
Luxpower		RS485	PIN 2: RS485A PIN 1: RS485B	PIN 2/7: RS485A PIN 1/8: RS485B	<ul style="list-style-type: none"> • Battery protocol change • Customized network cable
Voltronic Power		RS485	PIN 3: RS485B PIN 5: RS485A	PIN 2/7: RS485A PIN 1/8: RS485B	<ul style="list-style-type: none"> • Default battery protocol matching • Customized network cable
Sofar		CAN	PIN 1: CANH PIN 2: CANL	PIN 4: CANH PIN 5: CANL	<ul style="list-style-type: none"> • Battery protocol change • Customized network cable
SPNE		RS485	PIN 7: RS485A PIN 8: RS485B	PIN 2/7: RS485A PIN 1/8: RS485B	<ul style="list-style-type: none"> • Default battery protocol matching • Inverter protocol setting PYL
Deye		RS485 CAN	PIN 4: CANH PIN 5: CANL	PIN 4: CANH PIN 5: CANL	Default battery protocol matching
Megarevo		CAN	PIN 4: CANH PIN 5: CANL	PIN 4: CANH PIN 5: CANL	Default battery protocol matching
MUST		CAN	PIN 6: CANH PIN 5: CANL	PIN 4: CANH PIN 5: CANL	Battery protocol change customized network cable

Product Parameter

Items	48V Series	51.2V Series	Remark
Equalizing Voltage	54V	57.6V	<div>1. If the battery does not communicate, it is recommended to set the inverter parameters according to the recommended values.</div> <div>2. When the battery modules are connected in parallel with more than 4 pieces, it is recommended to use the bus bar as the parallel gathering point.</div>
Floating Charge Voltage	52.5V	56V	
Max.Discharging Cut-Off Voltage	40.5V	43.2V	
Recommended Discharging Cut-Off Voltage	45V	48V	
Maximum Charging Current	100A	100A	
Recommended Charging Current	20A	20A	
Maximum Discharge Current	100A	100A	
Recommended Discharge Current	50A	50A	
Parallel Connections	16 PCS	16 PCS	

Attentions & Maintenance

- Do not immerse the battery in water. When it is not in use, it should be placed in a cool and dry environment.
- Do not put the battery into fire or heat it from outside to avoid explosion or other dangers.
- Do not use the battery with reversed pole terminal & short-circuit, do not connect the battery directly to the power socket.
- Do not mix batteries from different manufacturers or different types as well as old and new batteries.
- Do not put hot, bulging, deformed or leaking batteries into the device for charging or discharging.
- Do not pierce the battery with nails or other sharp objects, and it is prohibited to throw, step on, knock, or hit the battery.
- Do not disassemble and disassemble batteries and components. Our company will not be responsible for any damage caused by unauthorized disassembly or repair.
- The battery has been strictly inspected before leaving the factory, If the customer finds that the purchased battery is hot, bulging or has a peculiar smell, please do not use it and return it to the factory immediately.
- When stored for a long time, in order to ensure the best performance of the battery, charge and discharge the battery every three months, and ensure that it is stored with 40%~60% of the power.
- Please use the battery within the temperature range specified in the specification sheet.
- The battery and inverter starting methods need to be executed in accordance with the power-on sequence.
- It is recommended that the battery load power does not exceed the maximum continuous discharge current of the battery (100 A)
- The battery is left aside for more than 3 months , it needs to be properly recharged manually to prevent it from running out of power.

 **Note:**
please contact technical personnel in time for any special technical problems not mentioned as above.

MARSRIVA Technology Co., Ltd.

Website: www.marsriva.com

E-mail: support@marsriva.com

Made in China

CE **FC** **RoHS**



Specifications are subject to change without notice, all product drawings are for reference only.